
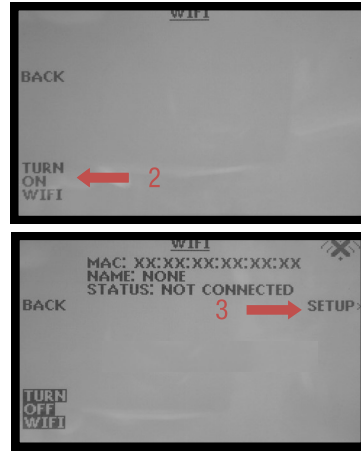 


MEMPHIS WI-FI SET UP GUIDE

ON YOUR GRILL CONTROLLER:

- 1) A Wi-Fi connection can be set up in minutes on your Memphis Wood Fire Grill. First power the grill ON by pressing the top left button  on the controller, then from the home screen press the “MENU” button, then the “DOWN ARROW”, then the “WIFI” button.
- 2) The “WIFI” screen on your grill contains everything needed to connect your grill to a Wi-Fi network. First, you will notice that Wi-Fi is OFF, this is enabled as default for users not wishing to use Wi-Fi. To turn Wi-Fi ON, simply press the button “TURN ON WIFI”.
- 3) Next, press and release the “SETUP” button and the grill will start searching for all nearby Wi-Fi networks. Once the status field displays “CONNECTING” the grill is ready to be connected to your network via any Wi-Fi compatible device.

 
 


ON YOUR PHONE OR TABLET: (UNDER WIFI SETTINGS)

- 4) Simply go to available Wi-Fi networks on your phone or tablet and select the network “Memphis Grill XX:XX”
NOTE: The XX:XX characters will match the last 4 digits shown on the grill controller next to MAC.
- 5) Once selected, the grills network will automatically bring you to a page where you will connect your grill to your Wi-Fi network. Search for all networks in range by hitting “Search”, all networks in range are displayed. Click on the network desired and it will auto populate the “SSID” field with your selection. Enter your networks password if you have one. If the network does not require a password, leave the password field blank.

NOTE: Some devices will not bring up the page shown automatically. Once your device is connected to the grill’s network, you can visit www.wificonfig.com to manually bring up the provisioning page

- 4) Click “CONNECT” and the page will automatically close.
- 5) The Wi-Fi setup is now complete. The status field in the grills Wi-Fi menu should now read “WIFI CONNECTED”. The time period from hitting “CONNECT” to “WIFI CONNECTED” can take up to 3 minutes based on connection strength.

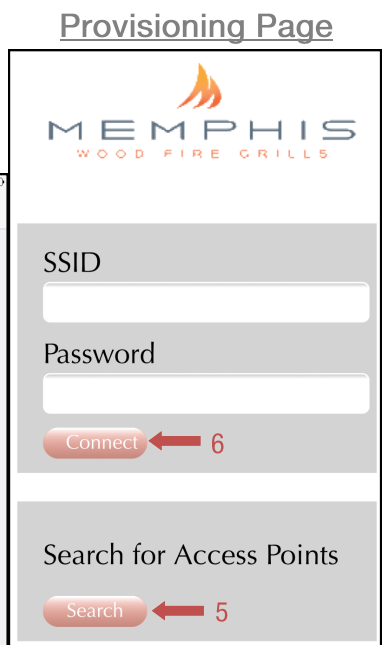 
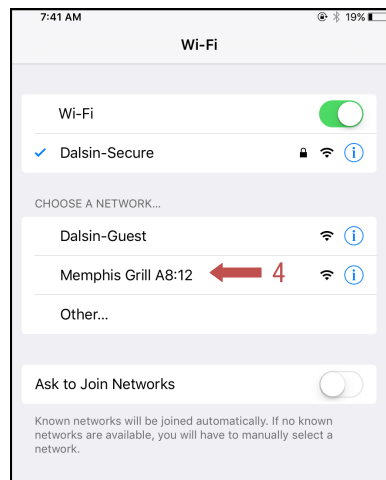 


ON YOUR PHONE OR TABLET: (IN THE MEMPHIS GRILLS APP)

- 8) Download our app “MEMPHIS GRILLS” from the IOS App Store or Google Play Store.
- 9) Enter a valid email into the “CUSTOMER ID” field and create a password that you will use to login to the app. After logging in, you will receive an email requiring you to confirm your email address before continuing.
- 10) Once the confirmation link is followed from your email, return to the app.
- 11) Once confirmed, login to the app again and you will be able to add your grill. Enter the exact MAC Address and Name shown on the grill controller

Example: MAC: F8:F0:05:F4:A8:12 NAME: MEMPHIS

NOTE: THERE ARE ONLY NUMERICAL 0'S IN THE MAC ADDRESS, NO ALPHABETICAL O'S. NICKNAME IS NOT CASE SENSATIVE. INCLUDE COLONS IN THE MAC ADDRESS AS SHOWN.

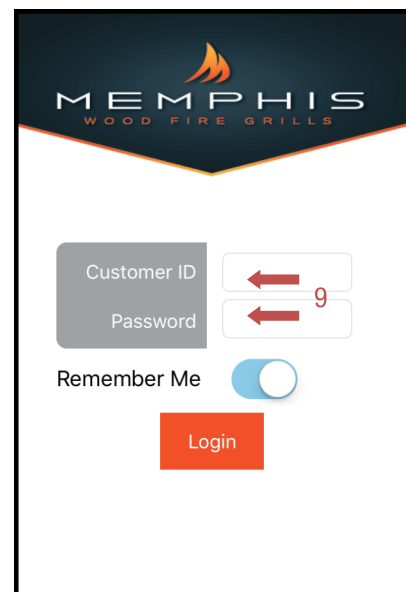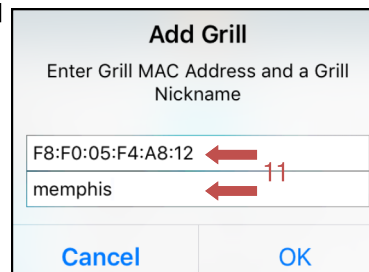

SETUP IS NOW COMPLETE!

 


ADVANTAGE QUICKSTART GUIDE



TOOLS REQUIRED

- 3/8” Open End Wrench, Socket or Adjustable Wrench
- Phillips Screw Driver or Drill
- Cut Resistant Gloves

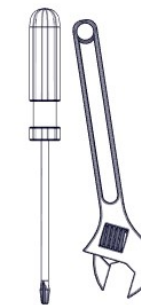 


CONTENTS

- 1: Tools Required
- 2: Included Hardware
- 2-3: Assembly Instructions
- 4: Wi-Fi Setup and App Pairing

TIME REQUIRED

1.5 Hours

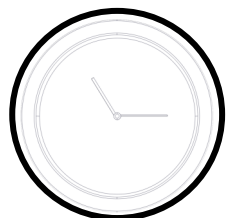

HARDWARE COMPONENTS

MEMPHIS ADVANTAGE ASSEMBLY INSTRUCTIONS

DESCRIPTION/PART NO.	QTY:	PICTURE
1) Grate Kit VG4401, VG4406	1	
2) Shelf Kit VG0572, VG0571 VG0562	1	
3) Grill Legs VG0566	4	
4) Swivel Caster DS4458	4	
5) Bottom Pan VG0545	4	
6) Savorizer® VG4403	1	
7) Direct Flame Insert VG4407	1	
8) Genie Tool VG1594	1	
9) Shelf & Leg Bolt DS2311	16	
10) Antenna VG9025	1	
11) #10 Screw BLK DS2185	10	
12) #10 Screw SS DS2185	2	
13) Cord Wrap VG0560	1	
14) Power Cord VG0911	1	
15) Tool Holder VG0215	1	

1: Remove the shelf kit, the hardware kit, Savorizer®, and grate kit from the grill. The shelf kit is shrunk wrapped to the top of the hopper lid. The hardware kit, Savorizer® and grate kit are in the grill hood.

Remove all laser film on the grill. This is a peel-able plastic left on to protect your grill from scratches during manufacturing and transit. Remove all laser film and laser etch lines with the included stainless steel wipes, WD40, or olive oil. Once a grill has been heated up it is very difficult to remove this film, be sure to check your grill thoroughly before first burn.

2: After unpacking all the components and removing all laser film, assemble the shelves as shown using the Shelf Kit components (2), 10x #10 Screw BLK (11), and 2x #10 Screw SS (12). Place both shelf tops face down. The shelf tops are symmetric and can be used for either side. The brackets are required to be assembled as shown. Use 2x #10 Screw SS (12) for the cord wrap fastening, use the #10 Screw BLK (11) for the brackets and tool holder.

3: Lay the grill on its back side on a non-abrasive surface. Slide the grill legs (3) into their locations as shown. NOTE: Nuts in the grill legs (3) should face the outside of the grill as shown and the side with two nuts should be up into the grill body.

4: Attach the left and right shelf, and the legs to the grill body with the included 3/8" Shelf and Leg Bolts (9) as shown. NOTE: This bolt passes through the shelf bracket, through the grill body, and into the nuts located in each leg. Each leg gets 2 bolts.

If you have purchased the Advantage Plus Kit, please refer to the assembly instructions included with your upgrade kit before proceeding with this document.

5: Attach the Bottom Pan (5) to the grill legs as shown. Secure with 8x Shelf and Leg Bolts (9).

6: Attach all 4 included Swivel Casters (4) into their sockets as shown. NOTE: The casters are a tight fit, lightly tap into place with a rubber mallet if necessary.

7: Place the grease trays inside receptacles in the main unit. Replace the Savorizer® as shown. Remove the tape holding the insert into place. Place the included grates on the front and back supports as shown.

8: Install the antenna (10) as shown. Turn clockwise to tighten.

ASSEMBLY IS NOW COMPLETE. PLUG IN YOUR GRILL. SEE YOUR MAIN MANUAL FOR FIRST BURN PROCEDURES PRIOR TO COOKING.

COMPLETE THE STEPS BELOW IN NUMERICAL ORDER, REFERENCE THE SAME NUMBERED DIAGRAM AND HARDWARE COMPONENTS FOR CLARIFICATION.

