



MEMPHIS PRO

MODEL NUMBER VG0001/VG0001E/VG0001S4/VG00001S4-3

CONTENTS


Clearance to Combustibles	2
Wiring Diagram	3-4





YOUR MEMPHIS GRILL MUST MAINTAIN THE SPECIFIED CLEARANCE TO COMBUSTIBLE MATERIALS WHILE OPERATING THE GRILL OR WHILE THE GRILL IS HOT!


CLEARANCE TO COMBUSTIBLE MATERIALS

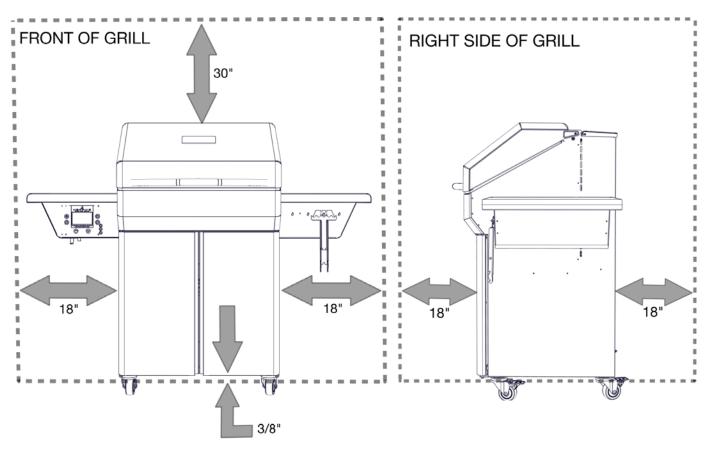

Below are some guidelines to ensure safe operation of your Memphis Grill

- The grill is to be supported by the casters provided.
- Grill casters are to be locked while the grill is in use or while the grill is hot.
- It is recommended that the grill be placed on a non-combustible surface.
- Operating the grill under a combustible ceiling or overhang is NOT recommended.
- Maintain the minimum clearance to combustible materials specified below.

A MAJOR CAUSE OF FIRES IS
FAILURE TO MAINTAIN REQUIRED
CLEARANCES (AIR SPACES) TO
COMBUSTIBLE MATERIALS. IT IS OF
THE UTMOST IMPORTANCE THAT
THIS PRODUCT BE INSTALLED ONLY
IN ACCORDANCE WITH THESE
INSTRUCTIONS

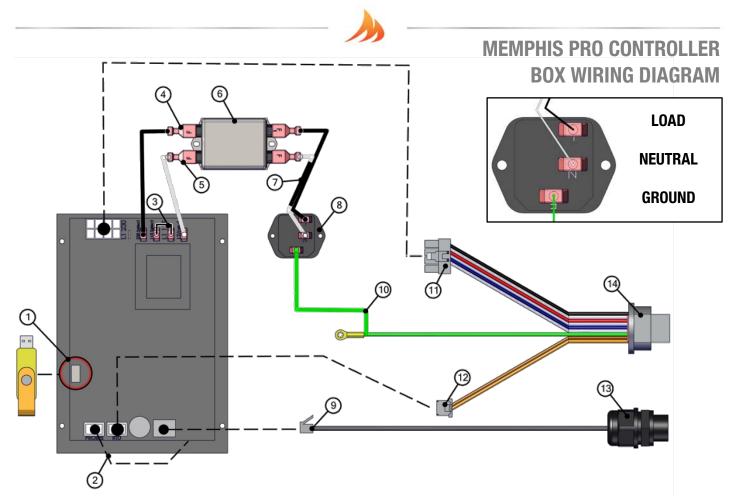


Item #	<u>NAME</u>	<u>DESCRIPTION</u>	
1	USB Port	Used to update your grill, see the "Updating Controller Software" section of the main manual for information.	
2	Meat Probe Wiring	This terminal is used to connect the meat probes to the controller.	
3	120/240 Select Jumper	Used when changing the input voltage to the controller, see "120v to 240v Conversion" section of the main manual for information.	
4	AC Load Wire from Filter to Controller	Carries AC voltage from the filter to the control board, load wire.	
5	AC Neutral Wire from Filter to Controller	Carries AC voltage from the filter to the control board, neutral wire.	
6	Filter	Reduces electrical feedback. Line = Outlet Side, Load = Grill Side. L1 = Load L2= Neutral	
7	AC Neutral and Load from IEC to	A two wire component which has a ferrite choke to eliminate input electrical	
	Filter	disturbances from the grid. Load and Neutral wires.	
8	IEC Plug	The same plug terminal used to attach your power cord to your grill. Top down view.	
9	Ethernet Cable	Used to connect your grill controller to the Wi-Fi card in the back of the grill.	
10	Grounding Wire	In the event your grill experiences a short, the grounding wire will send the voltage	
11	AC Component Wiring This large plastic connector carries all voltage used for AC components in the See "Component Wiring Diagram" for a description of all wires in this connector carries all voltage used for AC components in the See "Component Wiring Diagram" for a description of all wires in this connector carries all voltage used for AC components in the See "Component Wiring Diagram" for a description of all wires in this connector carries all voltage used for AC components in the See "Component Wiring Diagram" for a description of all wires in this connector carries all voltage used for AC components in the See "Component Wiring Diagram" for a description of all wires in this connector carries all voltage used for AC components in the See "Component Wiring Diagram" for a description of all wires in this connector carries all voltage used for AC components with the See "Component Wiring Diagram" for a description of all wires in this connector carries all voltage used for AC components with the See "Component Wiring Diagram" for a description of all wires in this connector carries all voltage used for AC components with the See "Component Wiring Diagram" for a description of all wires in this connector carries all voltage used for AC components with the See "Components Wiring Diagram" for a description of all wires in the See "Components Wiring Diagram" for a description of all wires all voltage used for AC components with the See "Components Wiring Diagram" for a description of all wires with the See "Components Wiring Diagram" for a description of all wires with the See "Components Wiring Diagram" for a description of all wires with the See "Components Wiring Diagram" for a description of all wires with the See "Components Wiring Diagram" for a description of all wires with the See "Components Wiring Diagram" for a description of all wires with the See "Components Wiring Diagram" for a description of all wires with the See "Components Wiring Diagram" for a description of all wires with the See "Components		
12	RTD Wiring (DC)	This small plastic connector carries DC voltage to the RTD.	
13	Controller Box Ethernet Cable	This gland is a weather tight pass-through for the Ethernet cable into the back of	
	Gland	the controller box.	
14	Controller Box Plug This plug is a weather tight quick disconnect for the main wiring harness whice carries all AC,DC, and Ground wires to the grill's components.		



NOTE: ALL TWO WIRE PAIRS FOR A SPECIFIC COMPONENT ARE REVERSABLE Example: The auger motor wiring can have the either spade connector from its two wire pair attached to either terminal and the motor will function normally.

MEMPHIS PRO COMPONENT WIRING DIAGRAM

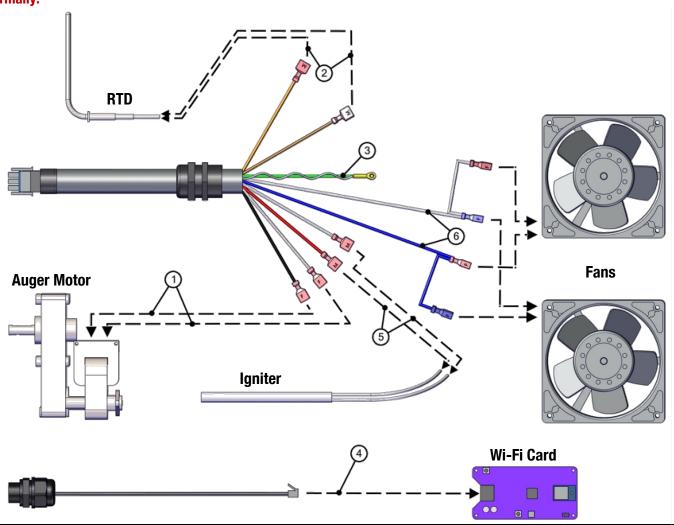

Item #	<u>NAME</u>	Wire Identification	<u>DESCRIPTION / INSTRUCTION</u>
1	Auger Motor	1x Black Wire, 1x White Wire	Attach both spade connectors to their respective terminals on the
	Wiring		top of the auger motor as indicated by the arrows shown above.
2	RTD Wiring	1x Orange Wire, 1x Brown Wire	Attach both spade connectors to the leads extending from the RTD
			as shown above.
3	Grounding Wire	Green Wire	The connection point for the ground is located directly below the
			auger motor on the vertical panel behind the auger motor.
4	Ethernet Cable	Black Cable with Ethernet End	Attach the Ethernet cable to the terminal on the Wi-Fi card as
			shown. Ensure that the wiring does not interfere with the auger
			motor's moving components.
5	Igniter Wiring	1x Red Wire, 1x White Wire	Attach both spade connectors to the leads extending from the
			igniter. These leads will extend from the airbox and can be located
			in between the two fans.
6	Fan Wiring	1x Blue Wire w/ 2 spade ends,	Attach BOTH blue spade connectors to 1 fan and then attach the red
		1x White Wire w/ 2 spade ends	spade connectors to the other fan.